



FLUSSOMETRO ELETTRONICO DA INCASSO

FUNZIONE BATTERIA: 6 Vdc (4 X 1,5V AA)

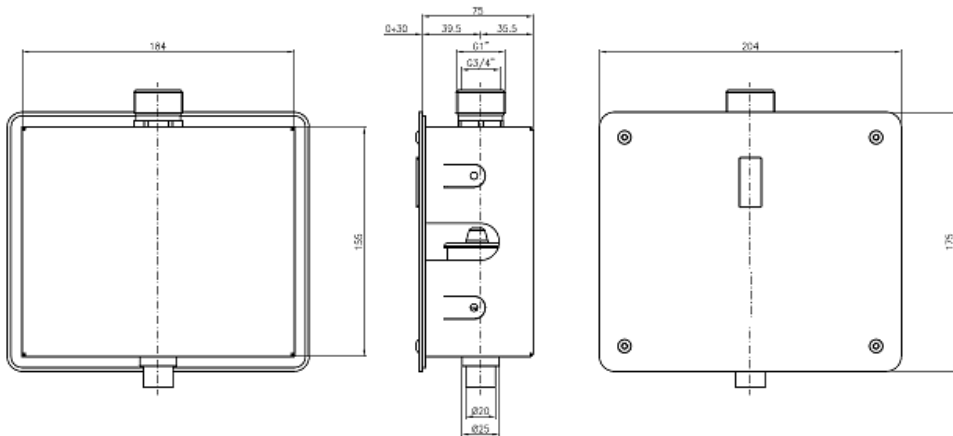


DATI TECNICI – ISTRUZIONI DI MONTAGGIO – AVVERTENZE PER L'USO

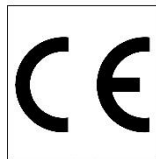

INFORMAZIONI TECNICHE

ALIMENTAZIONE	Batterie 6 V (4x1,5V AA)
PRESSIONE MINIMA DI UTILIZZO	0,5 bar
PRESSIONE MASSIMA DI UTILIZZO	6 bar
TEMPERATURA MASSIMA DI UTILIZZO	70°
DISTANZA MINIMA SENSORE	60 cm
DISTANZA MASSIMA SENSORE	75 cm
SEGNALAZIONE BATTERIA SCARICA	Sì
SISTEMA ANTIVANDALO	Sì
SISTEMA AUTOMATICO RUBINETTO	Ogni 24 h

ISTRUZIONI PER IL MONTAGGIO

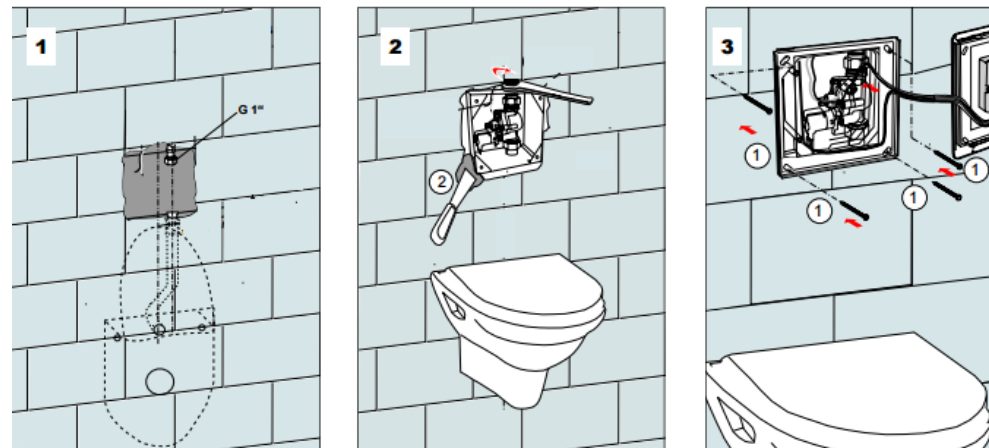

FUNZIONAMENTO





1. Inserire n. 4 batterie alcaline 1,5 V dc Mod. AA
2. Attendere circa 25/30 Sec senza posizionare nulla di fronte alla fotocellula. Durante questo tempo il sensore farà una serie di lampeggi e autoregolerà le sue funzioni in base alle caratteristiche ambientali.
3. Il dispositivo è pronto a funzionare
4. Per far sì che avvenga il risciacquo l'utente dovrà sostare minimo 7 Sec di fronte al sensore
5. Dopo 2 Sec dall'allontanamento avverrà il risciacquo. Tempo di risciacquo 5 Sec.
6. Trascorse 24 ore di non utilizzo il dispositivo farà un'erogazione automatica per evitare il ristagno delle acque.
7. Quando le batterie saranno scariche un segnale luminoso lampeggiante indicherà il momento di effettuare il cambio.

In caso di mancata erogazione dell'acqua, verificare che le batterie siano cariche e/o posizionate in modo corretto.

Il funzionamento del rubinetto è garantito solo con acqua priva di impurità, è quindi obbligatorio installare i rubinetti filtro a monte dell'impianto.

L'INOSSERVANZA DELLE INDICAZIONI CONTENUTE NEL PRESENTE OPUSCOLO COMPORTA LA DECADENZA DELLA GARANZIA.

BUILT-IN ELECTRONIC FLOWMETER

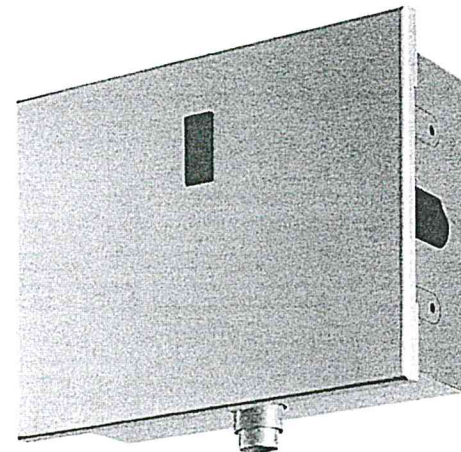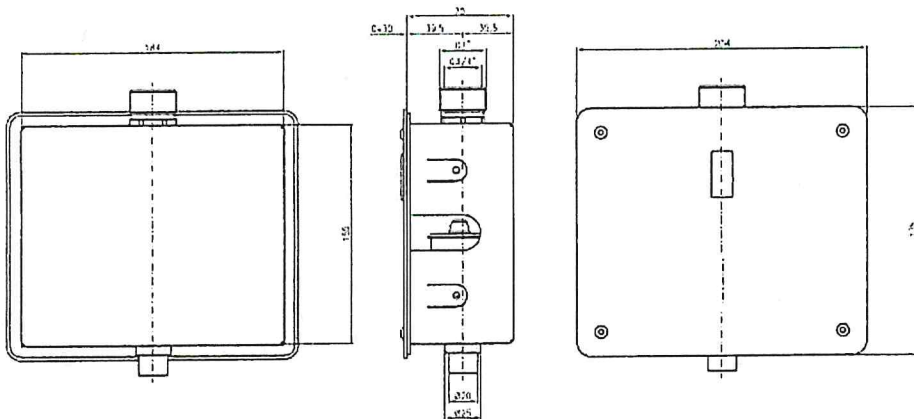


TECHNICAL DATA -ASSEMBLY INSTRUCTIONS – WARNINGS FOR USE




TECHNICAL DATA

POWER SUPPLY	Alkaline batteries 6 V (4x1,5V AA)
MINIMUM WORKING PRESSURE	0,5 bar
MAXIMUM WORKING PRESSURE	6 bar
MAXIMUM WORKING TEMPERATURE	70°
MINIMUM SENSING DISTANCE	60 cm
MAXIMUM SENSING DISTANCE	75 cm
BATTERY INDICATION DOWNLOAD	Yes
ANTIVANDAL SYSTEM	Yes
AUTOMATIC SYSTEM TAP	Every 24 h

ASSEMBLY INSTRUCTION

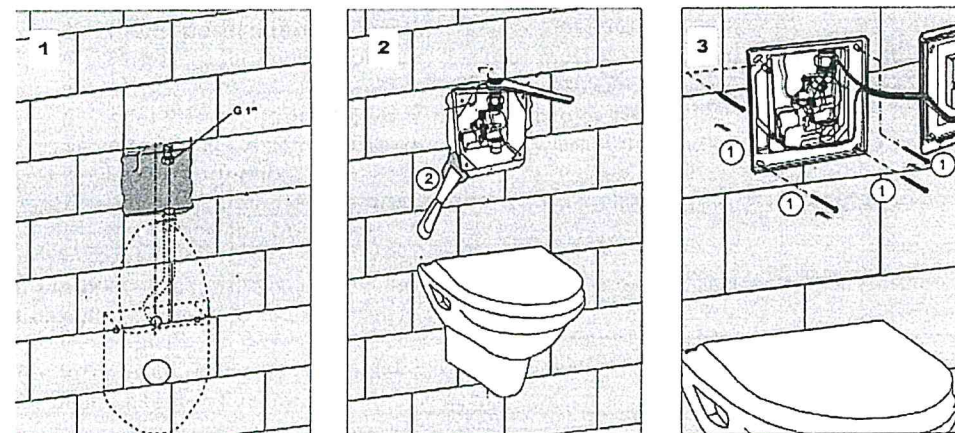

WORKING MODES

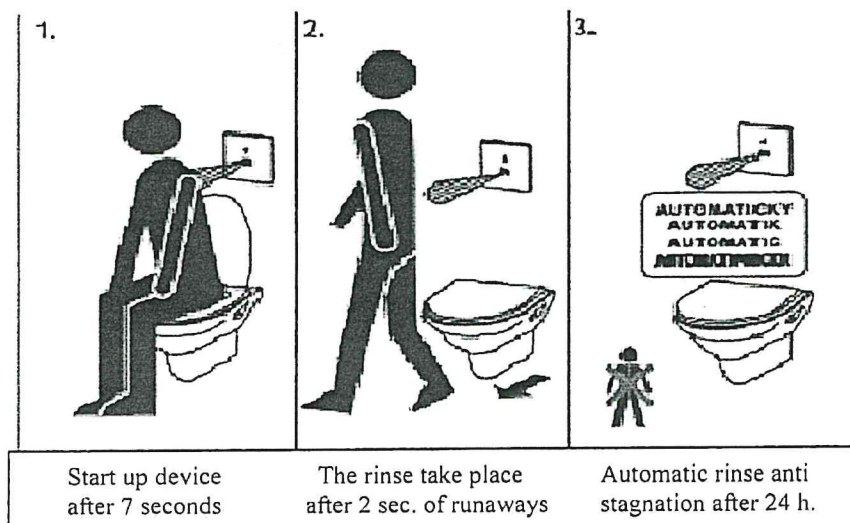

1. Insert nr. 4 alkaline batteries 1,5 V dc Mod. AA
2. Wait for about 25/30 Sec without placing anything in front of the photocell. During this time the sensor will make a series of flashes and self-regulate its functions according to the environmental characteristics
3. The disposal is ready to work.
4. To ensure that rinsing occurs, the user must stand at least 7 Sec in front of the sensor
5. After 2 seconds of runaways, rinsing will take place.
6. After 24 hours of non-use, the device will automatically do a rinse to prevent water stagnation.
7. When the batteries are discharged a flashing light signal will indicate the time to change the batteries

If water is not supplied, check that the batteries are charged and / or positioned correctly.

The tap operation is only guaranteed with water without impurities, so it is necessary to install the filter taps upstream of the system.

FURTHER INFORMATION REFERRED TO IN THIS OPUSCLE COULD VOID THE MANUFACTURER'S WARRANTY